

Service Bulletin

SB 10-6
2-4-82



SUBJECT: TIMING BELT
VEHICLES: DINO 308GT4

GENERAL

INFORMATION: If a timing belt is found to be loose or will be loosened or removed to perform repair work, the timing belt must be replaced.

IMPORTANT: Do not adjust the tension of the timing belt after the initial tensioning during the belt's first installation.

SERVICE

- INFORMATION:**
- The timing belt must be periodically inspected as specified by the Maintenance Schedule in the Owners Manual. If found to be loose or worn, replace it.
 - To properly adjust the timing belt tension after initial belt installation:
 - Bring engine to top dead center (1 - 4).
 - Loosen the blocking nuts of the belt idlers. Spring of idlers will automatically apply the correct tension to belt.
 - Rotate the engine forward one full turn to top dead center.
 - Tighten blocking nuts of idlers.

CAUTION: To prevent possible belt damage during installation, avoid any offsetting of the belt and contact with oily substances.

READ, INITIAL and PASS ON

SERVICE MANAGER	PARTS MANAGER	SERVICE WRITER	TECHNICAN				