

## Service Bulletin

**SB 80-10**  
**6-18-81**



SUBJECT: IGNITION DISTRIBUTOR ROTOR  
VEHICLES: ALL FUEL INJECTED MODELS

### SERVICE

INFORMATION: To ensure the rotor is properly and securely installed in the ignition distributor, perform the following:

- Before installing rotor, degrease the distributor shaft with a suitable degreasing solvent.
- Apply Loctite No. 242 on the fastening screw of the rotor, and on the outer surface of the camshaft extension.
- Noting the position of the notch in the distribution shaft, install rotor on to distributor shaft. Make certain rotor is fully snapped down on shaft.  
Torque fastening screw to .3 kgm (26 inch pounds).
- Do not start engine for approximately 3 hours after installation of rotor in order to allow correct curing of the Loctite.

READ, INITIAL and PASS ON

SERVICE MANAGER	PARTS MANAGER	SERVICE WRITER	TECHNICAN			